




## HOW TO CHOOSE YOUR COLOR WITH DISC-O SELECT™:

1. PRESS BUTTON TO TURN ON DISC
2. DISC WILL AUTOMATICALLY START CYCLING THROUGH COLORS IN THE FOLLOWING ORDER: RED, PURPLE, BLUE, AQUA, GREEN, WHITE
3. TO CHOOSE A COLOR, PRESS BUTTON AGAIN WHEN YOUR DESIRED COLOR IS SHOWN. NOTE: YOU CAN ONLY SELECT A COLOR DURING THE FIRST COLOR CYCLE. IF THE CYCLE HAS PASSED YOUR DESIRED COLOR, TURN THE DISC OFF AND ON AGAIN TO RESTART THE CYCLE.
4. IF NO COLOR IS CHOSEN DURING THE FIRST COLOR CYCLE, THE DISC WILL STAY IN DISC-O MODE UNTIL TURNED OFF.
5. PRESS BUTTON TO TURN OFF DISC WHEN FINISHED.

## BATTERY REPLACEMENT INSTRUCTIONS

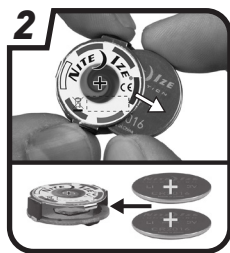

REPLACE BATTERIES:  
2 X CR2016 3V



**WARNING:**  
CHOKING HAZARD—Small parts  
Ages 14 and over.

### WARNING

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD.  
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**WARNING:** DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES. BATTERIES SHOULD BE INSERTED IN THE DIRECTION INDICATED ON THE BATTERY HOLDER. DO NOT REVERSE OR MIX THE DIRECTION OF THE BATTERIES.